

MODEL: 50721MD

## ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FOUNTAIN SHOULD TAKE APPROXIMATELY 25 MINUTES TO ASSEMBLE.


MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

### UNPACK THE FOUNTAIN



YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS: FOUNTAIN BODY, (3) SPLASH GUARDS, PANEL, LOWER RESERVOIR, PUMP WITH SPOT LIGHT, EXTRA BULB, TRANSFORMER, METAL PLATE, (6) WASHERS, (2) LONG SCREWS, (4) SHORT SCREWS, (2) PLANTERS AND WRENCH.

### FOUNTAIN ASSEMBLY


**1. PLACE SPOT LIGHT INTO SPOT LIGHT HOLDER AND PLACE PUMP FLAT IN RESERVOIR, THEN RUN PUMP POWER CORD UP AND OVER BACK OF RESERVOIR.**

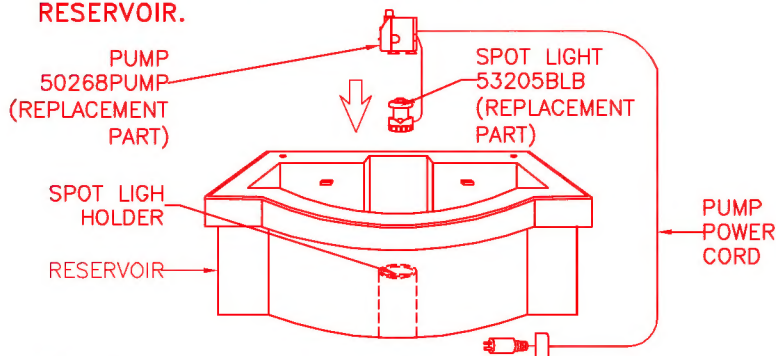


**2. PLACE FOUNTAIN BODY INTO RESERVOIR, SECURE FOUNTAIN BODY TO RESERVOIR WITH METAL PLATE, (4) WASHERS AND (4) SHORT SCREWS, THEN SECURE WITH (2) WASHERS AND (2) LONG SCREWS. (WRENCH INCLUDED)**

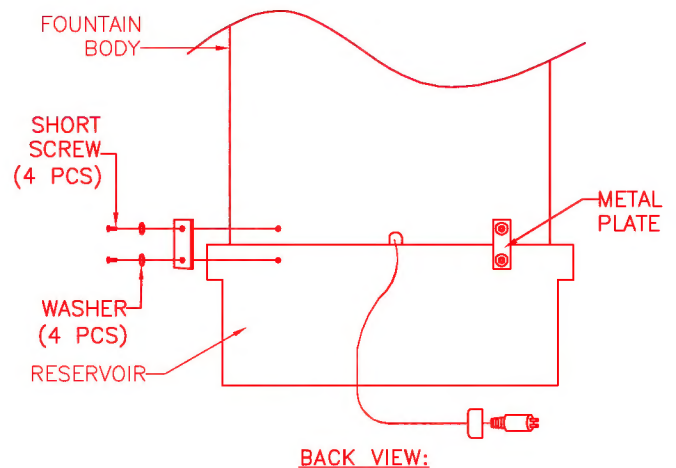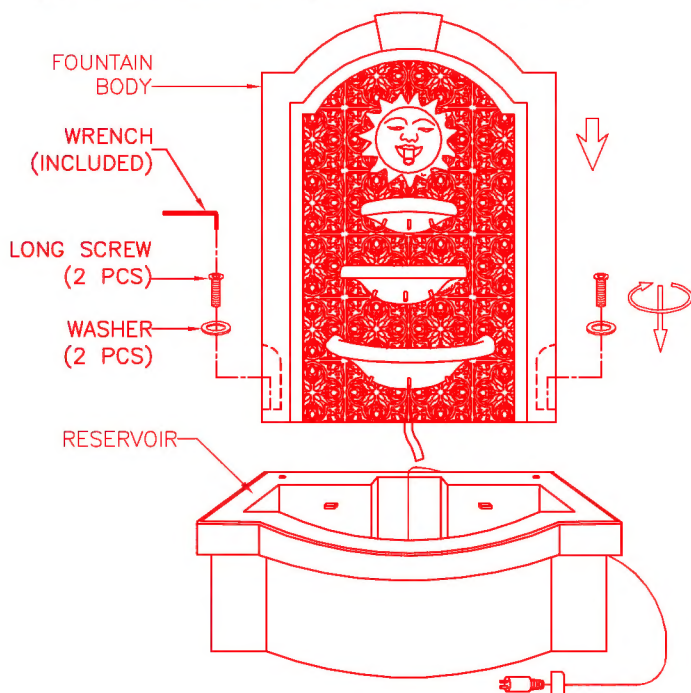

**3. ATTACH PUMP TO RUBBER HOSE, MAKE SURE PUMP SITS FLAT IN RESERVOIR.**

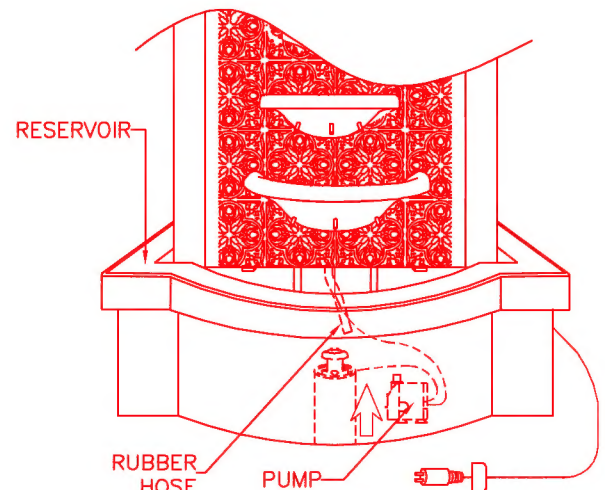

**4. SLIDE PANEL INTO RESERVOIR TO COVER THE ENTRY.**

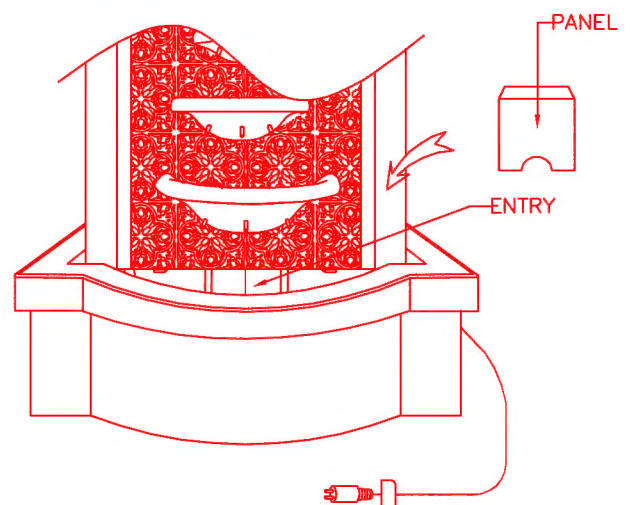


MODEL: 50721

## ASSEMBLY INSTRUCTIONS


READ AND SAVE THESE INSTRUCTIONS

### FOUNTAIN ASSEMBLY

5. PLACE UPPER SPLASH GUARD INTO UPPER RESERVOIR, PLACE MIDDLE SPLASH GUARD INTO MIDDLE RESERVOIR AND PLACE LOWER SPLASH GUARD INTO LOWER RESERVOIR TO PREVENT SPLASHING.

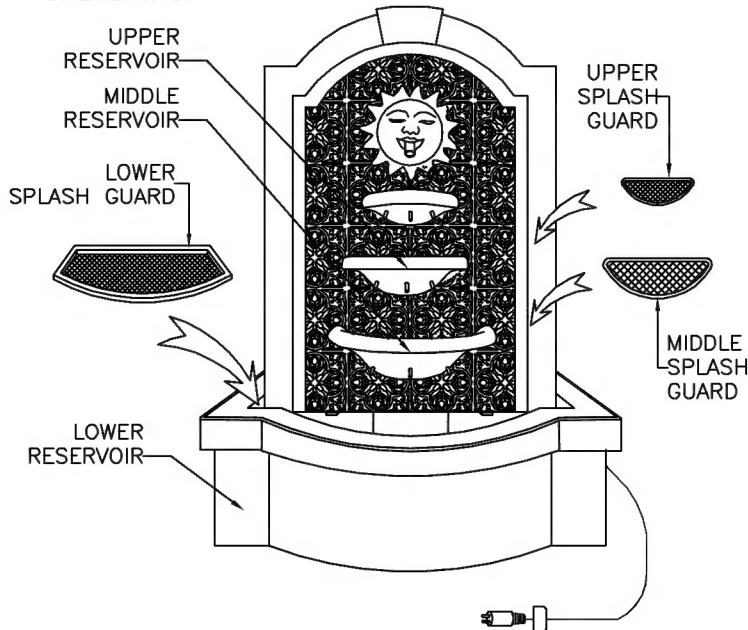

6. PLACE (2) PLANTERS ON THE SIDES OF THE RESERVOIR AS SHOWN. IF USE OF STOPPERS ARE NOT DESIRED, REMOVE THE (2) STOPPERS FROM PLANTERS.

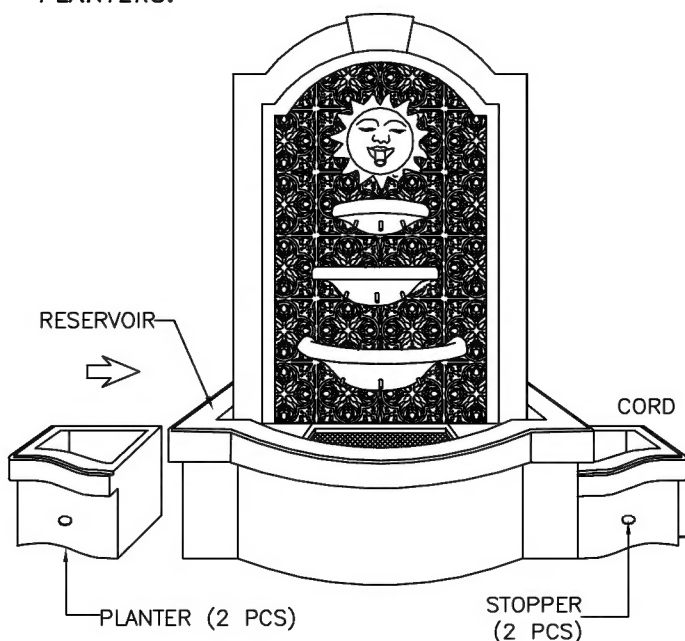

7. FILL RESERVOIR WITH 6 GALLONS OF WATER TO COMPLETELY SUBMERSE THE PUMP.

(DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.)

8. JOIN THE CONNECTORS AT TRANSFORMER AND SCREW THE CAP AND CONNECTOR TIGHTLY TOGETHER.

9. PLUG POWER CORD INTO OUTLET, YOUR NEW FOUNTAIN IS READY TO USE.

### TROUBLE SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.

2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.

3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

### SPLASHING DISCLAIMER:

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

### IMPORTANT PUMP INFORMATION:

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

### WARNING:

\* ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD-UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

\*\* RECOMMENDED FOR OUTDOOR USE ONLY.

\*\*\* THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.

### AVAILABLE PARTS ARE:

50268TRANS (TRANSFORMER)  
50268PUMP (PUMP)  
53205BLB (BULB)

TRANSFORMER  
50268TRANS  
(REPLACEMENT PART)

POWER CORD

CONNECTOR

CAP